


HP

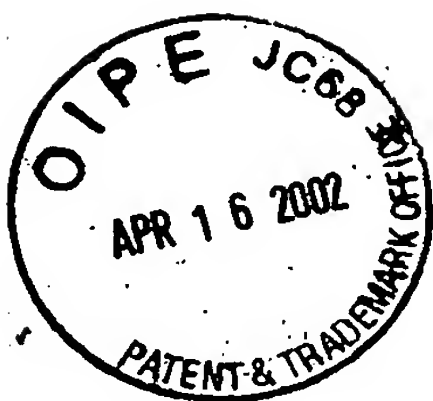

A method and apparatus for flat surface treatment

001
 002
 003
 004
 005
 006
 007
 008
 009
 010
 011
 012
 013
 014
 015
 016
 017
 018
 019
 020
 021
 022
 023
 024
 025
 026
 027
 028
 029
 030
 031
 032
 033
 034
 035
 036
 037
 038
 039
 040
 041
 042
 043
 044
 045
 046
 047
 048
 049
 050
 051
 052
 053
 054
 055
 056
 057
 058
 059
 060
 061
 062
 063
 064
 065
 066
 067
 068
 069
 070
 071
 072
 073
 074
 075
 076
 077
 078
 079
 080
 081
 082
 083
 084
 085
 086
 087
 088
 089
 090
 091
 092
 093
 094
 095
 096
 097
 098
 099
 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124
 125
 126
 127
 128
 129
 130
 131
 132
 133
 134
 135
 136
 137
 138
 139
 140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192
 193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213
 214
 215
 216
 217
 218
 219
 220
 221
 222
 223
 224
 225
 226
 227
 228
 229
 230
 231
 232
 233
 234
 235
 236
 237
 238
 239
 240
 241
 242
 243
 244
 245
 246
 247
 248
 249
 250
 251
 252
 253
 254
 255
 256
 257
 258
 259
 260
 261
 262
 263
 264
 265
 266
 267
 268
 269
 270
 271
 272
 273
 274
 275
 276
 277
 278
 279
 280
 281
 282
 283
 284
 285
 286
 287
 288
 289
 290
 291
 292
 293
 294
 295
 296
 297
 298
 299
 300
 301
 302
 303
 304
 305
 306
 307
 308
 309
 310
 311
 312
 313
 314
 315
 316
 317
 318
 319
 320
 321
 322
 323
 324
 325
 326
 327
 328
 329
 330
 331
 332
 333
 334
 335
 336
 337
 338
 339
 340
 341
 342
 343
 344
 345
 346
 347
 348
 349
 350
 351
 352
 353
 354
 355
 356
 357
 358
 359
 360
 361
 362
 363
 364
 365
 366
 367
 368
 369
 370
 371
 372
 373
 374
 375
 376
 377
 378
 379
 380
 381
 382
 383
 384
 385
 386
 387
 388
 389
 390
 391
 392
 393
 394
 395
 396
 397
 398
 399
 400
 401
 402
 403
 404
 405
 406
 407
 408
 409
 410
 411
 412
 413
 414
 415
 416
 417
 418
 419
 420
 421
 422
 423
 424
 425
 426
 427
 428
 429
 430
 431
 432
 433
 434
 435
 436
 437
 438
 439
 440
 441
 442
 443
 444
 445
 446
 447
 448
 449
 450
 451
 452
 453
 454
 455
 456
 457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512

1. Background of the invention

Commercial printers and plotters, as on-the-shelf products, exist in the home and office markets, and are designed to print on paper and transparencies. These products are equipped with popular printing heads, like ink-jets and laser.

Office printers are relatively inexpensive and are dedicated for fast quality printing on sheets of fixed width.

Advertising agencies, graphic designers, artists and engineering offices have, at most, one plotter in their office designated for paper only, and the cost of the equipment is determined by the maximum width of the plotter, and for the bigger dimensions are expensive.

Printing on special material, such as non-standard paper that is thicker than usual, not in standard rolls, carton, or glass, forces the use of dedicated service bureaus, which have such machines for special printing. Machines intended for such purposes are very expensive and not within reach of smaller offices, and turning to external service bureaus is also expensive and causes delays, as the cycle is longer.

Printing on special materials forces an examination of the outcome of the printing job, as the colors and quality of the print are unpredictable, and usually require at least one reprinting.

Present invention intends to provide a better solution to all the problems described above.

2. Summary of the invention

This invention refers to an apparatus comprising a support assembly capable of moving in accurate steps on flat horizontal surfaces, like a table, and which carries with it a surface treating instrument or mechanism such as printer, scanner, cutter, engraver, etc, which treats the surface as desired.

The movement of the support assembly is based on performing accurate steps. The accuracy of the system derives from the accuracy of the intermediate stages of each step, and from the fact that the support assembly actually is continuously in positive

contact with the surface. This provides the required basis for accurate surface treating tools.

The support assembly, equipped as mentioned above, will be used for applying various treatments of flat surfaces, such as printing, to desired surfaces such as a large sheet of paper or other flat materials. The term "treatment" used herein signifies at least one of the following: scanning, printing, patterning (e.g. engraving) and cutting. The surface to be treated may be paper, metal, linen, or any other flat material.

The advantage of this invention is that the support assembly can move above the treated material in unbound motion, instead of the material having to pass through it, which is common feature of present other machines. In the other machines the size, thickness and sometimes the flexibility limit the material. This machine is able also to treat all rigid materials, of any size and of any thickness, in any direction and any length. Such needs are encountered in the printing industry, for example.

The material that is, as an example, to be printed, is to be laid on the table or flat surface, with the support assembly, holding a printing tool, positioned over it. The support assembly receives step command from a control system, performs it, becomes stationary for a specified period in which the tool prints on a section of the material, and then the support assembly moves another step, and so on.

The support assembly is an integration of two sub-units, whose relative positions are fixed - in the stationary position, and floating - when in the state of movement. A single step of the support assembly is a combination of the full step of each unit relative to the other. A full step of the support assembly is composed of the following sequence: both units are stationary on the surface, one unit rises over the other, takes a full step forward, and then lowers itself back to the surface. After this, the second unit rises over the first, takes the same full step forward, and lowers itself back to the surface, where the support assembly is again in the stationary position. The (single line) printing action is then performed, after both units of the support assembly have finished their movements.

3. Brief Description of the Drawings

Figure 1 - Isometric view for general description, top-rear-left view.

Figure 2 - Isometric view for general description, top-front-right view.

Figures 3 to 8 are the same side view and explain a full support assembly step cycle.

Figure 3 - Printing position – both units 1,2 are stationary on the surface.

Figure 4 - First step- Unit 1 on the surface. Unit 2 Start moving above the surface.

Figure 5 - Second step - Unit 2 moves full step forward.

Figure 6 - Third Step - both units 1,2 on the surface.

Figure 7 - Forth step - Unit 1 start moving above Unit 2 & start moving full step forward.

Figure 8 - Step five - Unit 1 at full step forward & start moving down to the table.

Figure 9 - Vertical motion axle.

Figure 10 - Vertical and horizontal motion axle.

4. Detailed description of referred embodiment

Construction of the machine and the support assembly

Figure 1 and Figure 2 show a machine, built of the following: A Support assembly composed mainly of Units 1 and 2, Box 3, containing elements of a printing tool. Unit 1 has an electromechanical motion mechanism, also shown. The machine is positioned over Surface 4, on which the material to be printed on is laid.

Each of Units 1 and 2, both shaped like a horizontal "H", has four vertical legs in the corners, all of the same height for each Unit. The legs of Unit 1 are 5,6,7,8.

Units 1,2 have a certain freedom to move in relation to each other, in the horizontal and vertical directions. A complete step cycle is a combination of vertical and horizontal movements between them, created by the electromechanical mechanism, beginning and ending in the stationary state defined by the reference contact points.

Horizontally the Units have three contact points between them. Blocks 9,10 which are part of Unit 1 establish the longitudinal reference. These serve for contact points against Screws 11,12 which belong to Unit 2. The lateral reference point is established by a short pin inserted in Hole 13 of Unit 1 and points down, against which an edge of Unit 2 contacts at all times. Springs 14,16, are attached in tension between Units 1 and 2, and act to keep the Units as close as possible longitudinally, and Spring 15, also attached between the two units in tension, acts to maintain the contact in the lateral direction.

The above mentioned horizontal and vertical movements are created by Cams belonging to the two Axles 17,18, rotated by the Motor 19 and Transmission gears 20,21,22,23,24,25,26 comprising together the said electromechanical mechanism. The transmission synchronizes the two Axles as to the starting position angle, direction of rotation and angle rotated.

Axle 17, shown in detail in Figure 9, includes two cams of the excenter type that serve to create the relative vertical movement between Units 1 and 2. Axle 18, shown in

Figure 10, includes two identical cams like Axle 17 and two larger, also excenter-type, cams. The smaller cams here also serve for the vertical motion of the units, as the cams of Axle 17 do, and its larger cams serve for creating the longitudinal motion of the support assembly.

Axle 17 ends are installed in holes in Unit 1 and, when rotated by the transmission, its cams make timed-contacts with U profiles 27,28, which are solidly mounted onto Unit 2.

Similarly, Axle 18 is installed in Unit 1. Its smaller cams operate against U-profiles 29,30 of Unit 2, and its larger cams operate against Blocks 33,34 mounted onto Unit 2 also.

The kinematics of the support assembly operation

The support assembly forward motion is a repetitive succession of single steps, each created by a combination of vertical and horizontal relative motions between Units 1,2 and stationary-state periods between them.

The vertical relative motion is created as follows:

The support assembly, as described above, has four identical cams in its corners: Items 35,36 in Figure 9 and Items 31,32 of Figure 10, all attached to Unit 1, that rotate in synchronization and make timed contacts with Unit 2 by its U-profiles 27,28,29,30. These create the relative vertical motions between Unit 1 and Unit 2 during a single revolution of the axles.

The parts are so designed that each Cam 31,32,35,36, when passing its top position, presses against the U profile upper-inner surface and, as then Unit 1 has its legs on the Surface 4, it is able to lift it a little, thus Unit 2 lifts above Unit 1 for a short time, after which it comes down again. As the cam continues its rotation, when it passes through its straight-down point, it presses against same U's lower-inner surface. But now Unit 2, which the U-profile is part of, has its legs back on the Surface, so essentially Unit 1, by the action of its cam, lifts itself a little relative to Unit 2, and thus also above the Surface 4.

When no contact is made between the cam and the U-profile, all two Units' legs are on the Surface and there is no relative vertical motion then. This occurs twice per revolution.

Kandelshein LTD.

The horizontal relative motion is created as follows:

Axle 18, mounted onto Unit 1, has its two Cams 31,32 operating against Blocks 32,33 which are solidly mounted onto Unit 2. In the stationary state the round sectors of the Cams do not contact the Blocks and the distance between the Units is determined by the abovementioned system of contact points and springs. As the axle rotates, the Cam round sectors come into contact with the Blocks 33,34 and outdistance the Units one from the other, and return to the stationary state, completing a full revolution. When the sector where the radius is maximal and constant contacts and slides on the surface of the Block opposite it, the longitudinal distance between the Units is maximal and constant.

A full step is taking place when the wide side of excentric 31,32 touches the surface of elements 33,34.

Figure 1 and figure 2 are at the stationary stat.

The following description provides explanation of the combination of the above-described vertical and horizontal movements that together create the support assembly step. Reference is made to figures 3,4,5,6,7,8. These figures are side views of the support assembly. Taking Figure 3 as typical, it shows on left upper corner a detail of the Axle 18 with its smaller Cam 35 opposite the U-profile 30 (both upper-lower and lower-upper surfaces shown), and larger Cam 32 opposite Blocks 34. The gear transmission is here omitted for clarity. Like wise Axle 17 is omitted. On the upper right hand corner there is shown the detail of a reference point, where Screw 11, belonging to Unit 2, is positioned against Block 9 belonging to Unit 1. The Figure also shows two of the four legs that each unit has and the Surface 4.

Figures 3 to 8 show how a step is created by a full revolution of Axle 18 and its Cams anticlockwise. Axle 17, with its two Cams and the U-profile positioned opposite them, revolve in synchronization in the opposite direction and perform same actions.

A full step of the support assembly is composed of the following sequence, as a result of continuous revolving of Axle 18: A full step of the support assembly is equivalent to full round of the two axles.

Kandelshein LTD.

1. Figure 3 shows the stationary state where: Cam 35 is in no contact with the U-profile 30 therefore both Units 1,2 Legs are on the Surface, due to their weight and the tool's weight; Cam 32 is in no contact with Block 34, therefore there is positive contact in the reference point, caused by the horizontal Springs 14,16 seen in Figure 2.
2. Cam 35 comes to contact with the surface of the U-profile above it and Unit 2 starts rising relative to Unit 1; Legs 39,40 leave the surface 4, as shown in Figure 4.
3. Cam 32 makes contact with Block 34 and pushes it to the right, thus Unit 2, now in its raised level, outdistances from Unit 1 the distance dictated by the cam's round sector, actually the step size; between Block 9 and Screw 11 a gap is opened, as shown in Figure 5.
4. Cam 35 leaves the upper U-profile and thus Unit 2 is lowered back to the Surface, Legs 39,40 again make contact with the Surface, as shown in Figure 6.
5. Cam 35, belonging to Unit 1, now makes contact with the lower surface of the U-profile 30, so Unit 1 starts rising relative to Unit 2, lifting legs 6,7 from the surface; Cam 32 starts leaving Block 34, as shown in Figure 7.
6. Cam 32 completely left Block 34, so it let the springs 14,16 (Figure 2) close the distance between Units 1,2 as evidenced by the gap between Block 9 and Screw 11 shown closed, As now the legs of Unit 2 are on the surface, Unit 1 essentially moves to the right the same step-distance that Unit 2 made before. As Cam 35 begins leaving the U-profile below it, Unit 1 begins to lower itself back, as shown in Figure 8.
7. The support assembly is again in the stationary position all four legs 6,7,39,40 on the surface, as shown in Figure 3.

Box 3 in these drawings and description is, for example, an ink-jet printing head, or any other tool. These tools might be connected to the support assembly in any other place and are not part of this invention.

The operation of the machine consists of combined actions: The support assembly performs stepping movement, each step containing a stable (rest) period when solid

Kandelshein LTD.

contact with the surface is maintained, during which the action of the tool takes place. As the tool operation might create vibrations and/or some reactive forces from the treated surface, such contact is necessary for complete rest of the machine during this period. Preventing any motion ensures both the accuracy of the treating operation and the further propagation of the support assembly. This characteristic, together with the geometrical accuracy of the steps themselves, provides the overall accuracy of operation of the surface treating process.

The printed material is laid on surface 4. Between the surface and the support assembly.

Unstable material can be pressured by the bottom of Unit 1 legs 5,6 and legs 7,8 that can be connected in horizontal position

Axle 17 performs identical vertical actions by its cams against their neighboring U-profiles